

## **Instructions for Gate Stop** (To keep an RP gate from sliding down)

Follow the instructions for installation and assembly for the gate. After the 'B' clamps are attached (approx. 6" from the top and bottom) snap the Gate Stop into place and position it directly above the bottom wall clamp ('B' clamp) as shown in the picture below. The open end *half circle* side should face away from the door jam. After the Gate Stop is positioned you may glue it into place by using super glue.



Property of Rover Company

**[www.roverpet.com](http://www.roverpet.com)**

