

Assembly Instructions for Kali-Ko Kitten Kube #K222



Inventory: The Kitten Kube #K222 consists of (3) #C24 24" high panels (1) #CD24 24" single door panel (1) #C48C lid (top) (16) #200 panel clips (1) #F22 floor (4) #250 floor divider clips (2) #175 door clips. The panels will have already been connected together with #200 panel clips.

Please check to make sure your inventory is complete.


Step 1: Stretch out the panels and place them in the shape of a 2'x2' enclosure. The door can go wherever you choose ...in the front left, front right, or on the side. **Do not connect** the final panels together yet, however, until the floor is securely in place.

Step 2: Place the floor inside the enclosure area with the pipe side up (flat side down). Take the (4) -#250 floor divider clips and, starting to the left of the door, snap one clip onto the floor pipe frame and the lower panel bar, in the middle of the panel (see figure 1 below). Do this to each panel as you go around the enclosure. Connect the final panels together, snapping on the #200 panel clips.

Step 3: The #C24C lid is placed on next. Place the 2'x2' lid on top of the enclosure, making sure the clips face downward. Snap on the #200 panel clips to the top of the enclosure.

Congratulation! You are now ready to use your Kali-Ko Kitten Kube #K222 enclosure.

Fig. 1

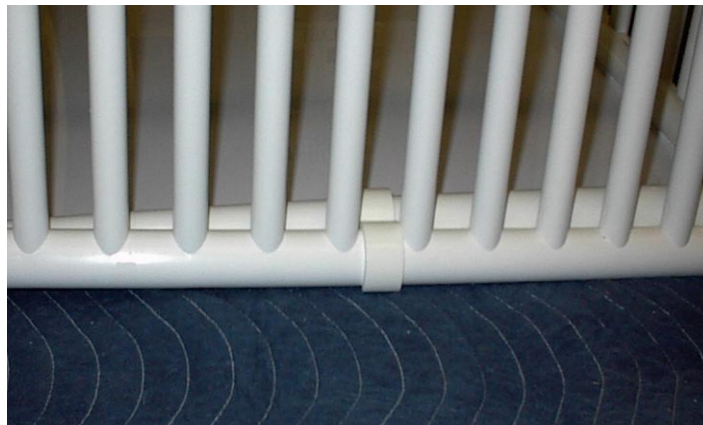

Property of Kali-Ko Kathouse, Div. of Rover Company



WWW.ROVERPET.COM