

Assembly Instructions for Kitty Kottage #K444W



Inventory: The Kitty Kottage #K444W consists of (7) #C48 48" high panels (1) #CD48 48" high single door (1) #F24 shelf (2) #C48C lids (top) (44) #200 panel clips (1) #S31 shelf support (4) #250 floor divider clips (3) #175 door clips (8) #FDC fold down clips (6) #LC locking casters (6) #NLC non locking casters (12) #CWC caster wheel clips. *Note: Please make sure your inventory is complete.*

Step 1: Stretch out the panels in the shape of a 4'x4' enclosure. If you purchased the optional floors with wheels please read the "*pre-drilled floor and wheels*" instructions included with your shipment. **Do not connect** the enclosure's final panels together until the floors are installed. The floors are attached to the enclosure using (2) -#250 floor divider clips per 2 ft. section. If you purchased floors without wheels please make sure the floors are installed with the pipe side up (flat side down). Take the #250 floor divider clips and, starting to the left of the door, snap two clips onto the floors pipe frame and the lower panel bar, two spaces from the end of the panel (*see figure 1 below*). Do this to each panel as you go around the enclosure. Where the two floors come together snap on (4) #250 floor divider clips. Connect the final panels to each other, snapping together the #200 panel clips.

Step 2: The inside of the back panels come with #FDC clips. “Fold down” these clips so they are flat. Place the #F24 shelf onto the fold down clips and attached (2) #250 floor divider clips to each 2ft. section of shelf. Shelf may go with flat side up or down. (See figure 2 below...view is from underside of enclosure with shelf's flat side up.) Next, attach the shelf brace in place by snapping the angled end onto one of the back panel's bottom bar, (near the center). The capped end will snap onto the outside perimeter of the shelf's bar. (See figure 3 below)

Step 3: Finally, place the (2) #C48C lids on top of the unit, making sure the #200 panel clips are facing down. Snap the (20) panel clips in place and 'even up' any sides that are sagging.

Congratulations! You are now ready to use your Kali-Ko Kitty Kottage #K444W.


Fig. 1



Fig. 2



Fig. 3

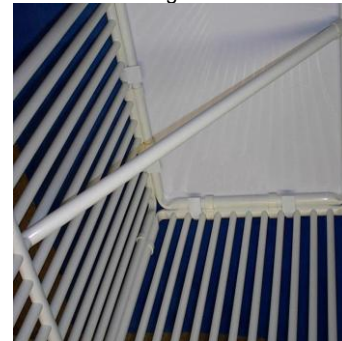

Property of Kali-Ko Kathouses, Div. of Rover Company



WWW.ROVERPET.COM