

Assembly Instructions Kali-Ko Kathouse #K666



Inventory: The Kali-Ko Kathouse #K666 consists of (11) #C72 72" high panels (with #FDC fold down clips attached) (1) #CD72 72" high single door (3) #F26 shelves (6) #S31 shelf support braces (84) #250 floor divider clips (3) #C72C lids (tops) (84) #200 panel clips (3) #175 door clips The panels will already have been snapped together in marked sections (front right, front left, etc.). Each section consists of 4 panels each. (*Optional purchase: floors*)

***NOTE:** *Please make sure your inventory is complete!*

Step 1: Unwrap the marked sections, placing them where described, and stretch out the panels in the shape of a 6' x 6' enclosure, making sure the door is in the middle of one side of the enclosure. Connect the sections together by snapping the #200 panel clips to the adjoining sections. **DO NOT** connect the door panel with the panel to its right yet.

Step 2: With the door panel open step inside the enclosure and 'fold down' all the #FDC fold down clips around the perimeter of the enclosure. Next, take a #F26 shelf and place it to the left on the fold down clips which are 2/3 of the way up the enclosure. Place the shelf with the flat side up, and let the pipe rest on the #FDC fold down clips. Secure in place by snapping on (10) #250 floor divider clips (2 per 2 ft. section); snapping them to the shelf's pipe and the panel's centerbar. Place the #250 floor divider clips underneath and inside of the #FDC clips. (See figure 1 below of the underside of the shelf.) Place the next shelf on the fold down clips to the right and secure in the same manner. The last shelf will go 1/3 of the way up on the back panels of the enclosure.

Step 3: Secure the #F26 shelves in place with the #S31 shelf support braces. Each shelf will have (2) #S31 support braces attached. The two braces will go approximately 2 ft. to the left and right of the center of the shelf. Snap on the brace with the 'cap' connecting to the shelves outside pipe and the angled part of the brace connecting to the lower panel. Secure as shown in figure 2 below (*also shown from the underside of the shelf*).

Fig 1

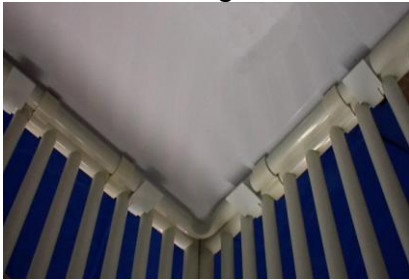


Fig. 2

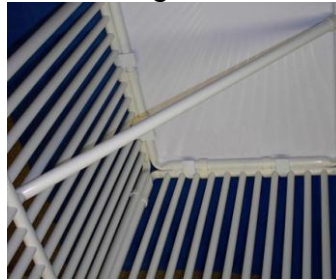


Fig. 3



Step 4: Place the (3) #C72C (lid) on top of the enclosure, making sure the #200 panel clips are facing down. Walk around the enclosure, snapping the #200 panel clips on as you go around. Make sure the lids are centered, and 'even-up' any sides that are sagging.

****NOTE: An enclosure should never be used outside without a floor attached.***

Congratulations! You are now ready to use your Kali-Ko Kathouse #K666 enclosure.

Property of Kali-Ko Kathouses, Div. of Rover Company



WWW.ROVERPET.COM