**Roverpet** 20 Kiji Dava Circle Prescott, Arizona 86301 **800-658-5925** **rover@roverpet.com**

# Roverpet #48DDPP – 48" high Double Door Puppy Crib Assembly Instructions

## Inventory List for The Roverpet #48DDPP Double Door Puppy Crib:

**(1) #DD48** 48" high Double Door
**(1) #F24** 2'x4' Shelf/Floor
**(6) #CWC** Caster Wheel Clips
**(12) #FDC** Fold Down Clips (Pre-installed)
**(4) #90** Corner Stabilizers
**(5) #148** 48" high Panels
**(3) #LC** Locking Casters
**(18) #200** Panel Clips (Pre-installed)
**(4) #175** Door Clips (Pre-installed)
**(1) #24DPK** Puppy Keeper
**(1) #F24W6** 2'x4' pre-drilled wheeled floor
**(3) #NLC** Non-locking Casters
**(24) #250** Floor Clips
**(2) #180** Straight Stabilizers

**(The Capped Sunbreeze Cover Shown is optional)**

## Assembly Procedure

1.) Unpack contents of shipping carton and compare to inventory list above.
2.) Assemble the wheels onto the #F24W6 pre-drilled floor. Follow the *'F24W6 Assembly Instructions'* enclosed.
3.) Unfold the assembled #148 Panels and #DD48 Double Door. Position them into a rectangle, with the #DD48 Double Door positioned like the photo above. Make sure the #200 Panel Clip's open to the "inside" of the puppy crib.

4.) Connect the (3) #200 Panel Clips from the #148 Panel to the #DD48 Double Door, securing the puppy crib together.

5.) Install (4) #90 Stabilizers and (2) #180 Stabilizer where the panels meet one another.

6.) Place the pet cage over the #F24W6 Floor. The pet enclosure will rest on the outside of the #F24W6 Floor frame. Locate the Roverpet puppy crib over the floor so the (1) #DD48 Double Door is positioned with the Locking Casters easily accessible.

7.) Install **(2)** #250 floor clips for each Roverpet puppy crib panel. Snap the clip over the panel frame and #F24W6 wheeled floor frame, securing the panels to the #F24W6 floor.

8.) Open the bottom door by unsnapping the installed (2) #175 panel clips, and open the door. Place **(2)** #250 clips just to the inside of the door opening area.

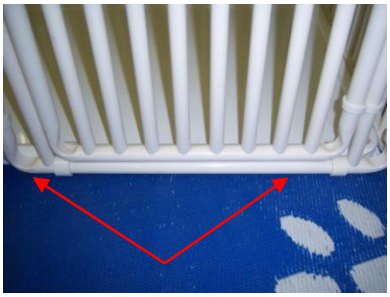

9.) Installed on the panels inside the unit are #FDC Fold Down Clips (2 per panel). Rotate the clips down until they contact the vertical bars of the panel. Place the #F24 Floor, with the flat side down, onto the #FDC's.

10.) Install (1) #250 Floor Clip at the center of each panel to the floor. Place (2) #250 clips just to the inside of the door opening areas as done in Step 7.

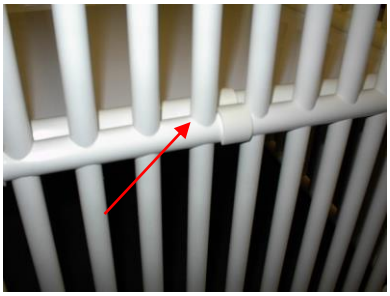

- If you desire to install the #24DPK for your Roverpet Puppy Crib, follow the *'DPK Puppy Keeper Assembly Instructions'* included.

**Congratulations, you are now ready to use your Roverpet #48DDPP Puppy Crib!**

**Property of Roverpet**

**www.roverpet.com**

Roverpet

Quality your pet deserves

Made in USA